



**STOP**



**Finish** (gradual stop)

Whole body / Shoulders / Back

**START**

(select auto program)



Knead / Tap / Knead&Tap

**Adjust massage mode**



Back (Full) / Back (Part)

**Adjust massage area**



Back massage height up/down



Wide / Std / Narrow

**Adjust width**



High / Med / Low

**Adjust shoulder position**



**Reclining**



Fast / Slow / Auto



**Foot massage**



If no power turn on: Main Power Switch

Located:  
Back side of chair,  
down left

