



Dryer TOSHIBA ED-60C

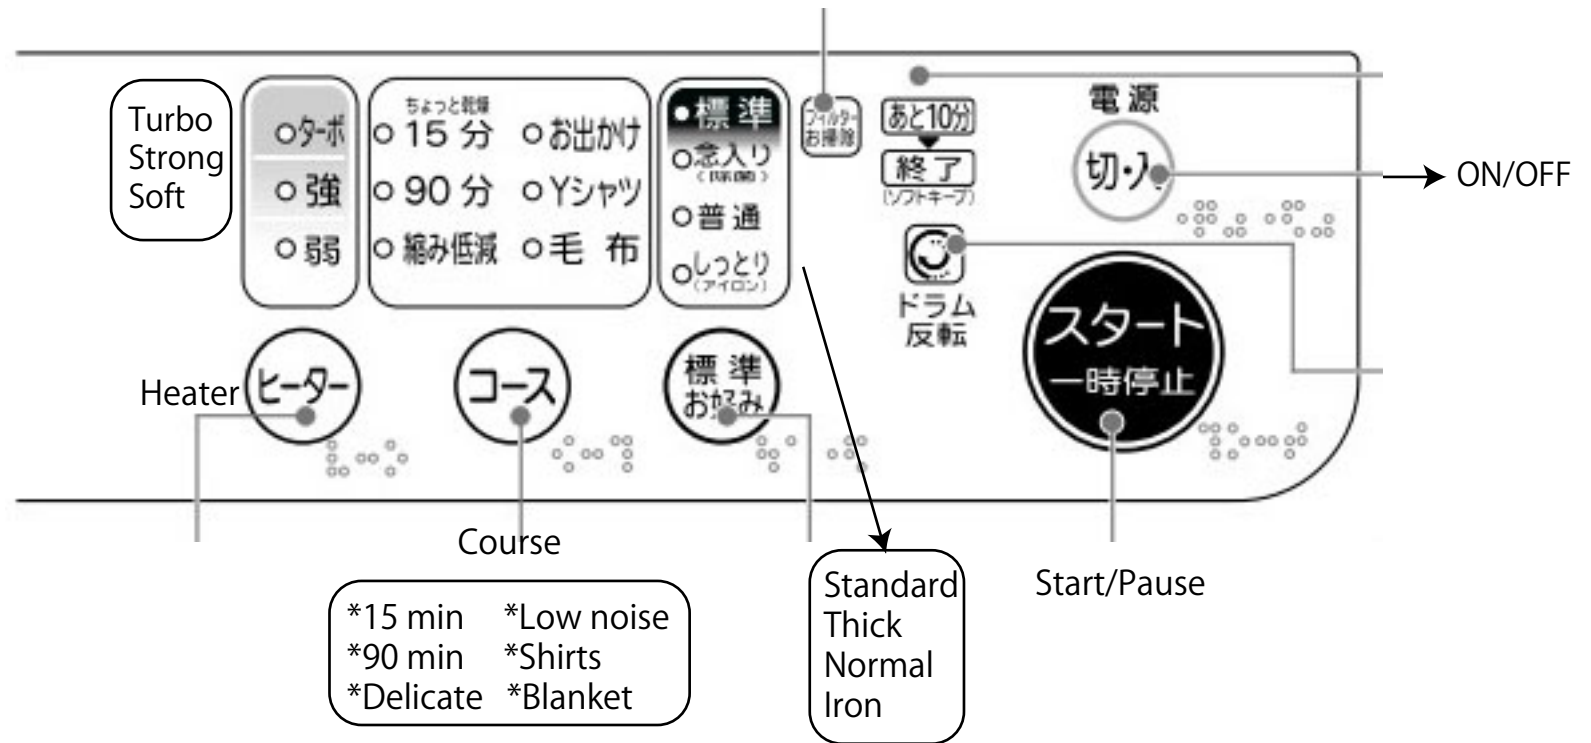

How to wash:

1. Power on & insert clothes
2. Choose program
3. (Optional) Customize program
4. Press start
5. Insert detergent
6. Close lid

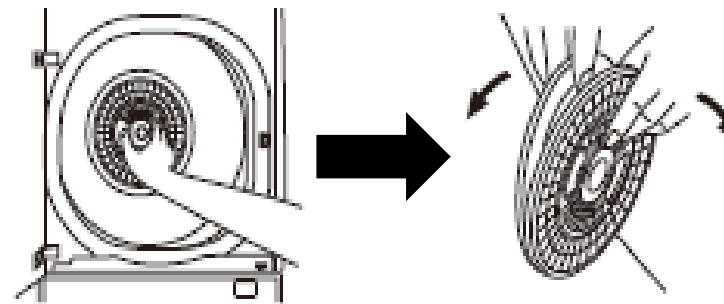

***Clean filter everytime after drying**