


# WASHER & DRYER

ES-H10DWL

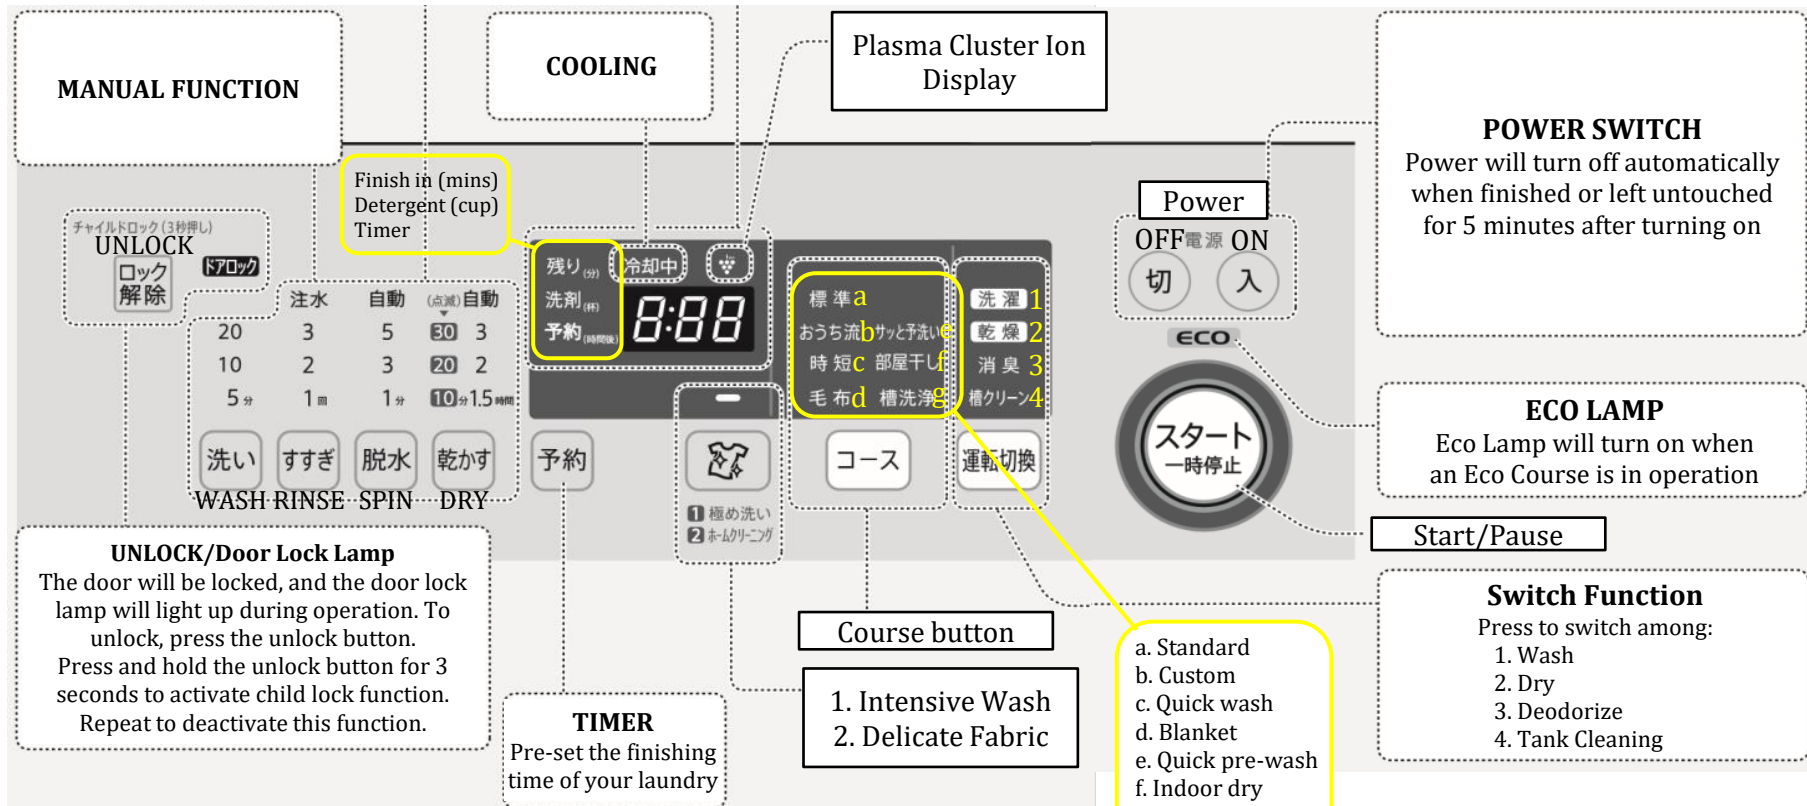

- a. Standard  
b. Custom  
c. Quick wash  
d. Blanket  
e. Quick pre-wash  
f. Indoor dry  
g. Tank cleaning

- How to use:
1. Power on and insert clothes
  2. Choose program
  3. Press start
  4. Insert detergent correspondingly to the displayed amount
  5. Close the door

