


Rice Cooker

Sharp KS-S10J-S

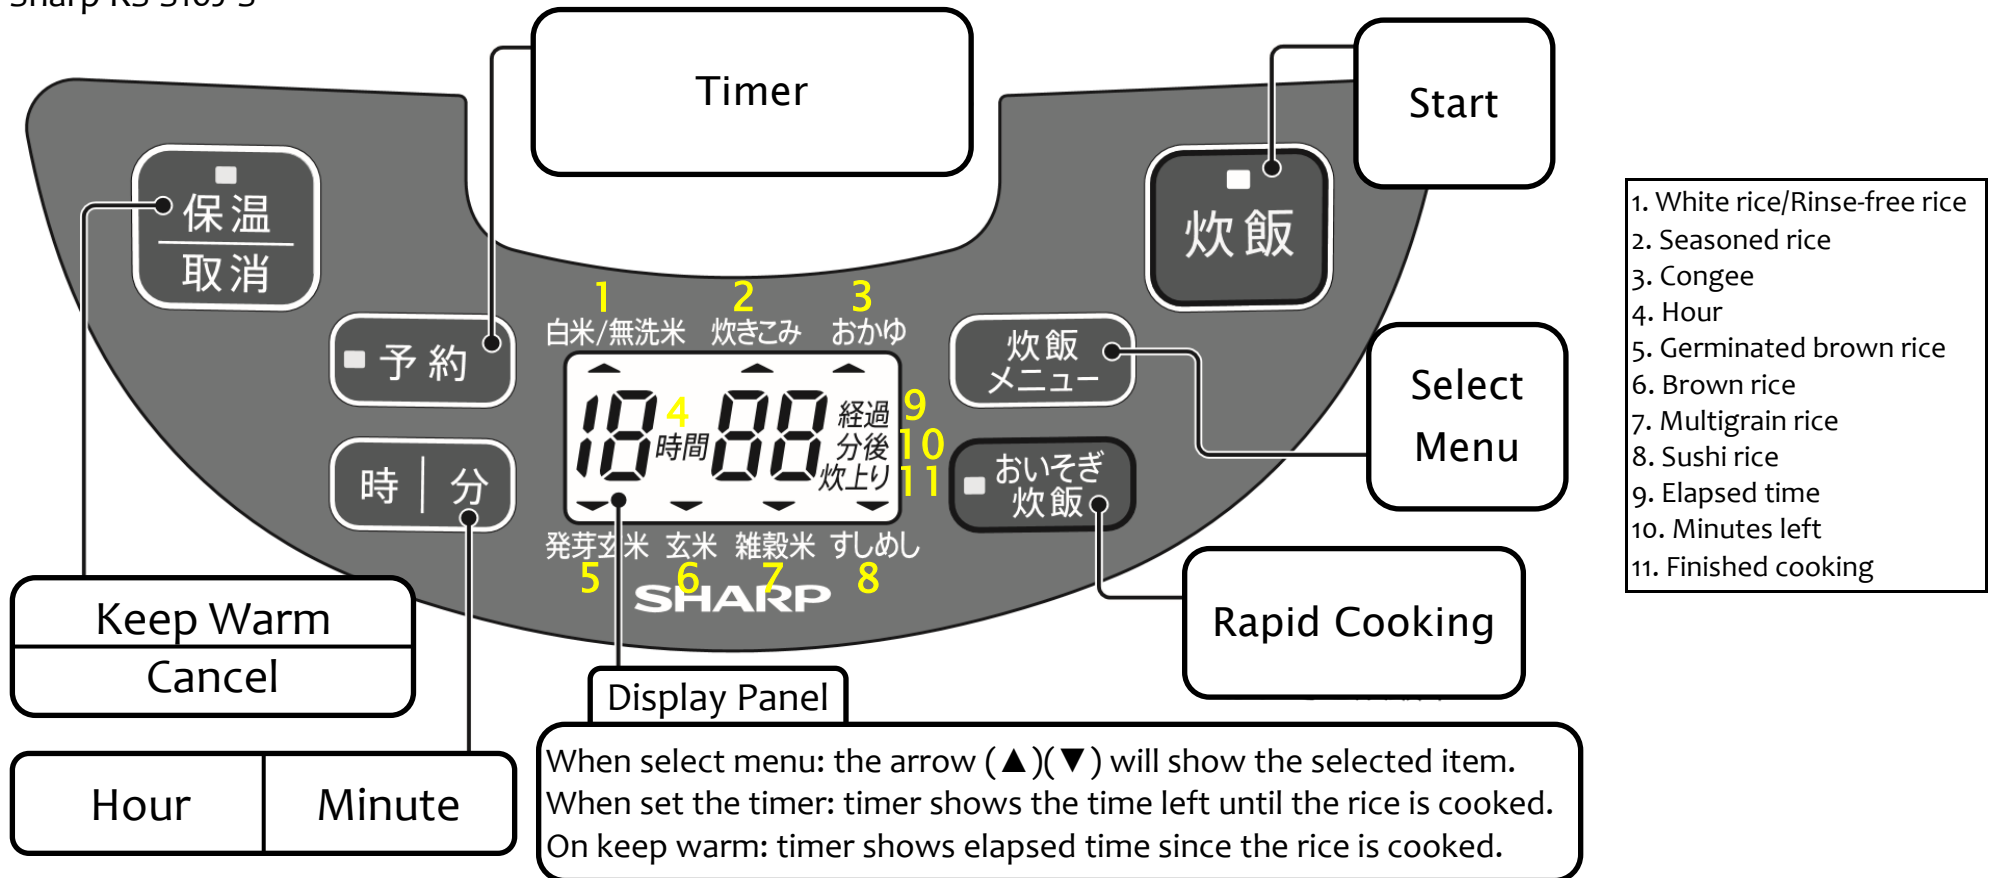

To cook rice:

1. Add rice to the pot using the provided cup (1 cup = 180ml)
2. Rinse rice until the water becomes clear in the pot
3. Adjust the level of water proportionate to the amount of rice
4. Place the pot into the rice cooker
5. Select menu using the designated button
6. Press Start/Press Rapid Cooking to start cooking

※Rapid Cooking can only be used for regular and rinse-free white rice

※Clean the pot and the lid each time you use the rice cooker

To set the timer:

1. Press timer button
2. Set the timer using Hour/Minute button (Press the same button repeatedly to add up unit)
3. Select the desired menu
4. Press Start

※Timer shows the time left until the rice is cooked